

Charging the battery

- Use the included microUSB cable to charge via a computer. Do not use a separate charger (i.e. iPhone charger, etc.) as the voltage may be higher than the GoPro uses.
- Each charge should last between 1-1.5 hours.

Camera modes

- **To change camera modes, press the Power button.** The icon displayed at the top of the screen will cycle through the 5 available modes: Video, Photo, Multi-shot, Playback and Setup.
- **You can change the settings for a mode by pressing the Settings button and using the Power button to cycle through the available menus.** To change a setting, use the Shutter button to move through the available options. To exit or go back, press the Settings button again.

Capturing video

- Use the Power button to select Video mode. If necessary, choose one of the alternative capture modes under the Video mode settings menu. **The default capture mode is set to normal video recording.**
- **Press the Shutter button** – the camera will beep once and the status lights will flash while you are recording. **To stop recording, press the Shutter button again** – the camera will beep three times and the status lights will flash three times.
- If the memory card fills up, the battery dies, or if the camera needs to shut down for any other reason, the camera will stop recording, save your footage and power down.
- Video can also be captured remotely via the GoPro app.

Taking photos

- Use the Power button to select Photo mode. If necessary, choose one of the alternative capture modes under the Photo mode settings menu – **default capture mode is set to capture a single, normal exposure photo.**
- **Press the Shutter button** – the camera will beep two times and the camera status lights will flash. The counter on the display screen should increase by 1 to reflect the photo you just took.

Playing back and exporting footage

- Footage can be played back using the GoPro software, available for free on their website, or the free GoPro app on your tablet/smartphone.
- **On a computer:** Connect the camera to your computer using the microUSB cable included. Copy the files from the camera to your computer. These files can be viewed in the GoPro software.
- **On the app:** Connect the camera to the app via Wi-fi. Playback options will appear when the camera and app are linked.

Connecting to the GoPro app

- Press the Power button and cycle through the modes to Setup mode. Check that Wireless is on.
- The app will search for the camera and then give the option to Connect Your Camera.
- Follow the onscreen instructions.
 - Wi-fi login info – username: **mrcsgopro1** ; password: **12345678**

Full manual here: http://cbcdn1.gp-static.com/uploads/product_manual/file/490/UM_H4Black_ENG_REVD_WEB.pdf